


Instruction Manual

Please read these instructions fully
before using this product

Smart Living Steam Mop

Pure cleaning with steam

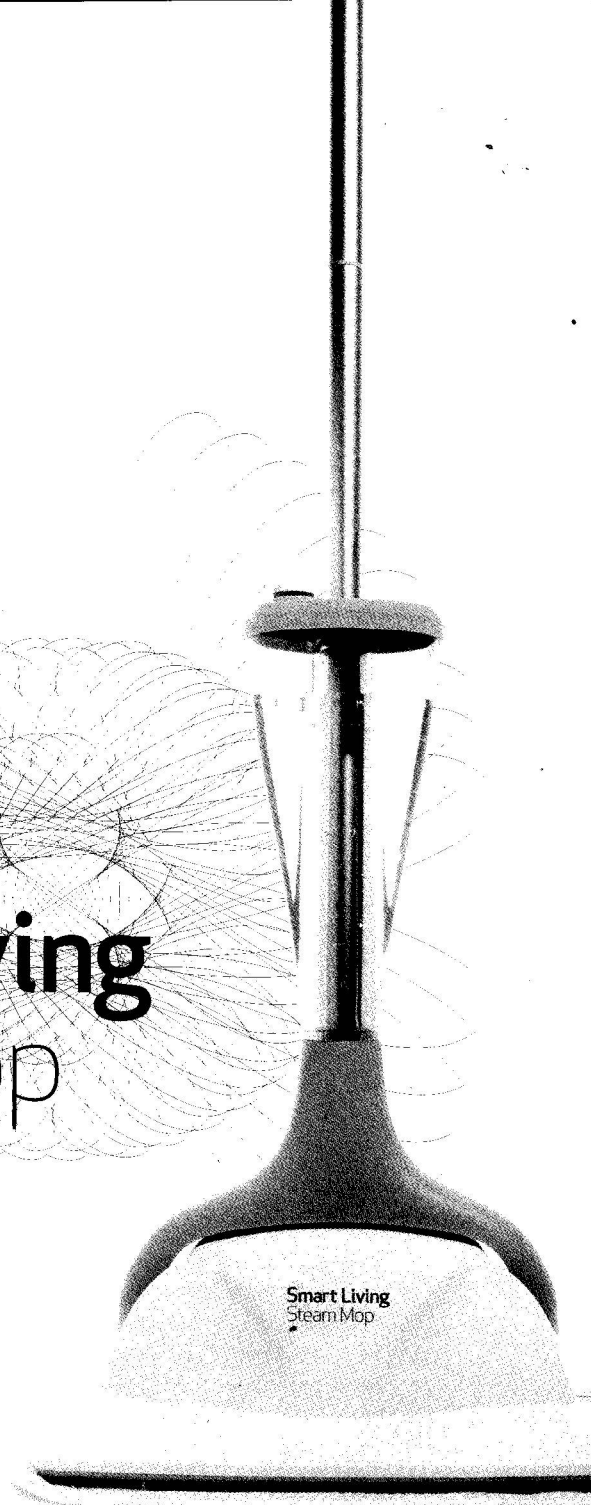

Safety Instructions

Read all instructions carefully before using the Smart Living Steam Mop. When using an electrical appliance, basic precautions should be observed, including the following:

To Reduce the Risk of Fire, Electric Shock or Injury

- 1 Before connecting the unit to the power supply, make sure the voltage indicated on the steam mop corresponds with the voltage in your home. Otherwise, contact your dealer and do NOT use the unit.
 - 2 Use only as described in this manual. Use only the manufacturer's recommended accessories.
 - 3 Do not use extension cords or outlets with inadequate current rating. Care should be taken to arrange the cord so that the cord could not be pulled or tripped over.
 - 4 Never disconnect the cord by pulling it from the outlet; grasp the plug and pull to disconnect.
 - 5 Do not allow the cord to make contact with hot surfaces. Allow the steam mop to cool down completely before putting away. Loop the cord loosely around the steam mop when storing.
 - 6 Do not leave the steam mop connected to an electrical outlet when it is not in use.
 - 7 Do not pull or carry by the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp corners or edges.
 - 8 Do not use the steam mop in an enclosed space filled with vapours given off by oil-based paint, paint thinner, some moth proofing substances, flammable dust, or other explosive and toxic vapours.
 - 9 Do not treat the steam mop as a toy. Close attention is necessary when used near children, pets or plants.
 - 10 Never turn the steam mop over or on its side when it is in use. Never direct steam towards people, animals, or plants.
 - 11 Do not handle the plug or the steam mop with wet hands or operate it without shoes.
 - 12 To protect against fire, electric shock or personal injury, do not immerse the cord, plug or the appliance into water or other liquids. Do not expose the steam mop to rain or a damp atmosphere.
 - 13 Turn off all the controls before unplugging from the electrical outlet.
 - 14 Do not operate this steam mop if the cord or plug has been damaged or after the steam mop has malfunctioned in any manner.
 - 15 Unplug the appliance from the electrical outlet before refilling the water tank, adding and removing attachments or cleaning.
 - 16 Never leave the steam mop unattended while connected to the power supply.
 - 17 Never put products containing perfumes, alcohol or detergent into the steam mop; this will cause damage, make it unsafe and invalidate your warranty.
 - 18 Do not use on wax polished floors or other delicate, steam sensitive materials.
 - 19 Do not block the steam mop's openings.
 - 20 Do not touch the hot surface or steam. There is a danger of scalding.
 - 21 Steam must not be directed towards equipment containing electrical components.
 - 22 This unit is for household use only.
 - 23 Store indoors.
-

CAUTION The force and heat of the steam may adversely affect certain materials. Always check if the surface is suitable by testing on a hidden area.

Examples (for guidance only):

- Varnished wood or glossy leather can be bleached by the effects of steam.
- Shiny plastic materials and wax-treated floors can become tarnished by steam.
- Acrylic, velvet and linen are very sensitive to the temperature of steam.
- Do not use on unsealed wood floors or let unit stand on any wood or poly-laminate floor for an extended period of time.

The manufacturer accepts no liability for damage caused to objects, materials, persons or animals due to the inappropriate use of steam or through non-compliance with the advice and recommendations shown in the instruction manual.

IMPORTANT Ensure the above safety precautions are understood.

SAVE THESE INSTRUCTIONS

Electrical Requirements

Please ensure that the voltage shown on the rating plate of your appliance corresponds with your household electricity supply which must be AC (Alternating Current).

Appliances are supplied with a fitted plug. If the electrical sockets in your home are not suitable for the plug fitted to this appliance, the plug should be removed and an appropriate one fitted.

NOTE Any plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.


NOTICE Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Main Features

The Smart Living Steam Mop is a new way of cleaning that is effective and hygienic. High temperature steam can make it easier to remove the stubborn household dirt and kill dust mites and many types of bacteria when used properly.

To disinfect a specific area, position the steamer over the area for a minimum of eight seconds. This allows the floor beneath the steamer to reach approximately 62°C. Use this procedure to disinfect the floor near or in the bathroom, food preparation areas, pet sleeping quarters, etc.

- A Base of Main Unit
- B Water Tank
- c1 Top Handle Shaft
- c2 Bottom Handle Shaft
- D Power Indicator Light
- E Temperature Indicator Light
- F Pump Switch
- G Handle
- H Stopper
- I Cleaning Pad
- J Sliding Ring

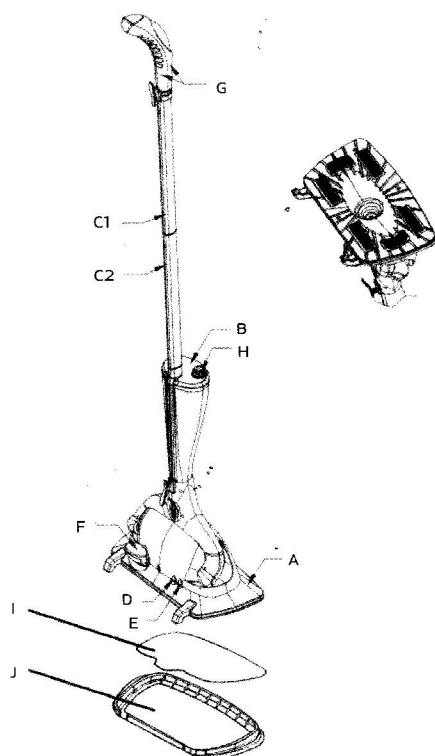

Operating Instructions

Please take time to read these instructions carefully before using your steam mop for the first time.

Assembling the Handle

The two handle sections (c1 & c2) are different. The section with the plastic sprung locating lug is the bottom section (c2).

To assemble, fit the top handle shaft (c1) into the top of c2 and push together firmly. Insert the handle (G) into the assembled handle shaft (c1 & c2) and slot the whole assembly down through the back of the water tank until it clicks into position. Removal is by pressing the plastic sprung locating lug showing in the hole at the base of the water tank and pulling upwards.

NOTE If the handle does not go right into its location, it is the wrong way round, do not force.

Filling the Water Tank (B)

- Remove the stopper (H) by turning counter-clockwise.
- Fill the tank with pure water using the water jug (supplied). The use of distilled water is especially recommended in hard water areas to prevent lime scale build-up and prolong the life of your appliance.
- After filling with water, replace the stopper into the water tank, press and turn clockwise.

CAUTION Do not overfill. Max water capacity is 430 ml.

IMPORTANT Never add anything to the tank except cool pure water. Cleaning detergents or any other spirit based liquid might be dangerous and could damage the appliance and invalidate the warranty.

Power Cable

Before using the appliance, completely release the full length of the power cable.

CAUTION Do not leave the appliance in one area when hot.

Power Indicator Light (D)/Temperature Indicator Light (E)

When the handle shaft is placed securely and the tank filled with water, plug the appliance into a main electricity supply. The red power indicator light (D) will illuminate to indicate the unit is connected to the power supply. When the operational temperature is reached, the temperature indicator light (E) will illuminate, during use, the temperature indicator light (E) will switch on and off under normal conditions, this is in line with the steam generator maintaining temperature.

Pump Switch (F)

Once the temperature indicator light (E) is on, press pump switch by foot; the pump will pump water into the heating element, high temperature steam is generated until the appliance is switched off by pressing it again.

NOTE It may initially take a few minutes before steam is produced after the temperature indicator light (E) comes on.

The Smart Living Steam Mop uses the latest technology to provide you with continuous steam through the use of a motorized pump. When the pump is in operation, a noise from the motor is heard – this is normal and is not cause for alarm.

IMPORTANT Never exert more than 5 lbs of force on the pump switch (F), excessive force will damage the switch.

CAUTION Always turn off all the switches after usage and when refilling with water.

Cleaning Pad (I)

The cleaning pad is held in position by special gripping strips which grip the main base unit (A). Align these with the grippers on the main base and press into place smoothing the whole surface to remove any wrinkles. To remove the pad for cleaning, just peel off. To clean the cloth, just wash in hot soapy water and rinse. Should you experience stubborn

stains on your floor, it is possible to dampen the stain with detergent before steaming it with your mop, but do ensure that the detergent is compatible with the surface being cleaned.

Slider Ring (J)

The slider ring is only required when cleaning and sanitizing your carpets or rough surfaces.

Place the slider ring on the floor and place the steam mop with the cleaning pad attached into it.

NOTE Slider ring (J) does not clip onto the steam mop. The mop simply sits in the slider ring.

CAUTION The steam mop must be switched off before placing into the slider ring. It is recommended to test a small area of carpet in an unseen area for compatibility with a steam process, do not allow the steam mop to stand stationary on one spot. The heat may damage fibres or polished surfaces.

Using the Smart Living Steam Mop

Once the steam mop is generating steam, operate it by passing it slowly over the surface to be cleaned. This is the ideal method to thoroughly clean your floor. On some rough surfaces it may only be possible to pull the appliance backwards.

Storage

- Turn off all the controls and unplug the appliance from the electrical outlet.
- Wind the power cord around the cord holder.
- Store the steam mop indoors in a cool, dry area.

CAUTION Always empty water tank for storage.

Cleaning and Maintenance

- The unit must be turned off and unplugged from the electrical outlet and allowed to cool down before all cleaning and maintenance tasks on the appliance.
- Use a damp sponge or cloth to clean the housing.
- Do not immerse the unit in water.

Guarantee and Service Information

The Smart Living Steam Mop is fully guaranteed for one year from the date of original purchase against any deficiency or fault in manufacture.

This guarantee in no way prejudices your rights under common law and is offered as an addition to consumers' statutory rights.

This guarantee does not cover normal wear and tear, damage caused by overloading, negligence, accident or improper use. Any change or modification made by the purchaser or user to the appliance will invalidate the guarantee, as would any attempted repair.

The guarantee applies only when the appliance has been operated in accordance with the instructions and connected to an electricity supply, which matched that shown on the base of the appliance.

The guarantee will be rendered invalid if the product is resold. The product must be used solely for domestic purposes.

Troubleshooting Tips

Periodically, an air bubble may occur within the steam mop's waterline. This may cause the unit to temporarily stop producing steam. The following simple troubleshooting suggestions should solve this problem.

If the motor is running and no steam is being produced, try rapping the unit firmly on the floor numerous times. Steam should then be released. Another possible solution is to pivot the handle of the mop to the floor from side to side several times.